


TP-Link Archer C6


1. Internetinio adreso lauke įveskite 192.168.0.1 (jei nebuvo pakeista kitokiu);



2. į abu laukelius „User Name“ ir „Password“ įveskite žodį **admin**. Pateksite į maršruto parinktuvo nustatymus;

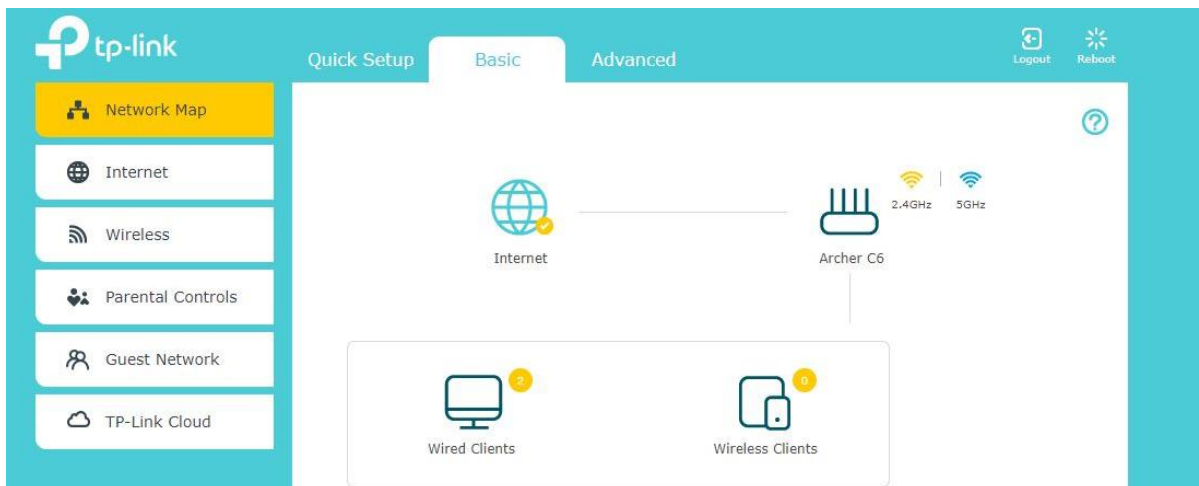

3. viršuje pasirinkite skiltį „Advanced“;

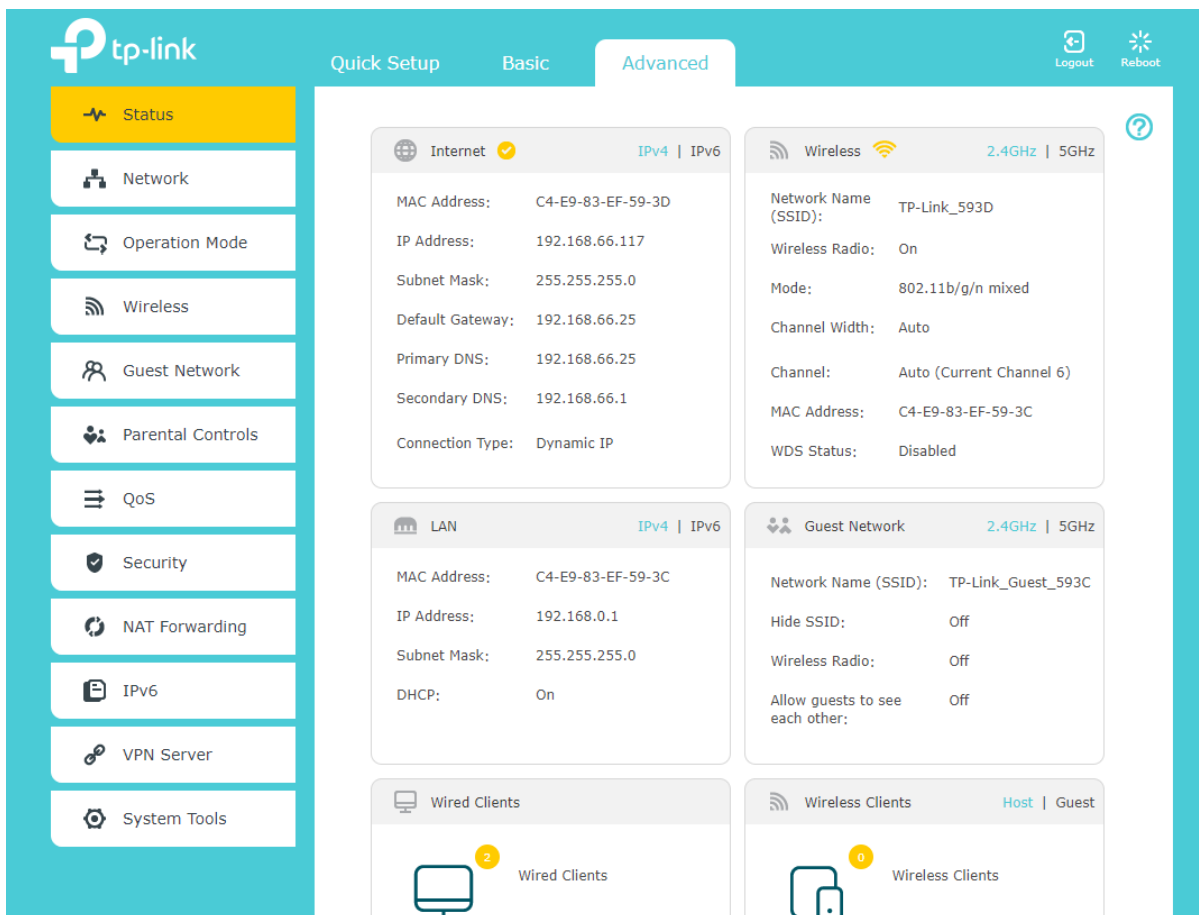

4. kairėje meniu pusėje pasirinkite „Wireless“;

The screenshot shows the TP-Link Advanced settings page. The left sidebar has the 'Wireless' option selected. The main content area is divided into several sections:

- Internet:** IPv4 | IPv6. MAC Address: C4-E9-83-EF-59-3D. IP Address: 192.168.66.117. Subnet Mask: 255.255.255.0. Default Gateway: 192.168.66.25. Primary DNS: 192.168.66.25. Secondary DNS: 192.168.66.1. Connection Type: Dynamic IP.
- Wireless:** 2.4GHz | 5GHz. Network Name (SSID): TP-Link_593D. Wireless Radio: On. Mode: 802.11b/g/n mixed. Channel Width: Auto. Channel: Auto (Current Channel 6). MAC Address: C4-E9-83-EF-59-3C. WDS Status: Disabled.
- LAN:** IPv4 | IPv6. MAC Address: C4-E9-83-EF-59-3C. IP Address: 192.168.0.1. Subnet Mask: 255.255.255.0. DHCP: On.
- Guest Network:** 2.4GHz | 5GHz. Network Name (SSID): TP-Link_Guest_593C. Hide SSID: Off. Wireless Radio: Off. Allow guests to see each other: Off.
- Wired Clients:** 2 Wired Clients. LEO-MS-7529.
- Wireless Clients:** 0 Wireless Clients.


5. pasirinkite „Wireless settings“;

The screenshot shows the TP-Link Advanced settings page with the 'Wireless Settings' section selected in the left sidebar. The main content area displays the configuration for the wireless network:

- Wireless Settings:** 2.4GHz | 5GHz.
- Enable Wireless Radio
- Sharing Network:** Hide SSID
- Network Name (SSID): TP-Link_593D
- Security: No Security
- Mode: 802.11b/g/n mixed
- Channel Width: Auto
- Channel: Auto
- Transmit Power: Low Middle High
- Save**

6. laukelyje „Security“ nustatykite „WPA/WPA2-Personal (Recommended)“;

7. laukelyje „Password“ įrašykite savo sugalvotą slaptažodį. Paspauskite „Save“;

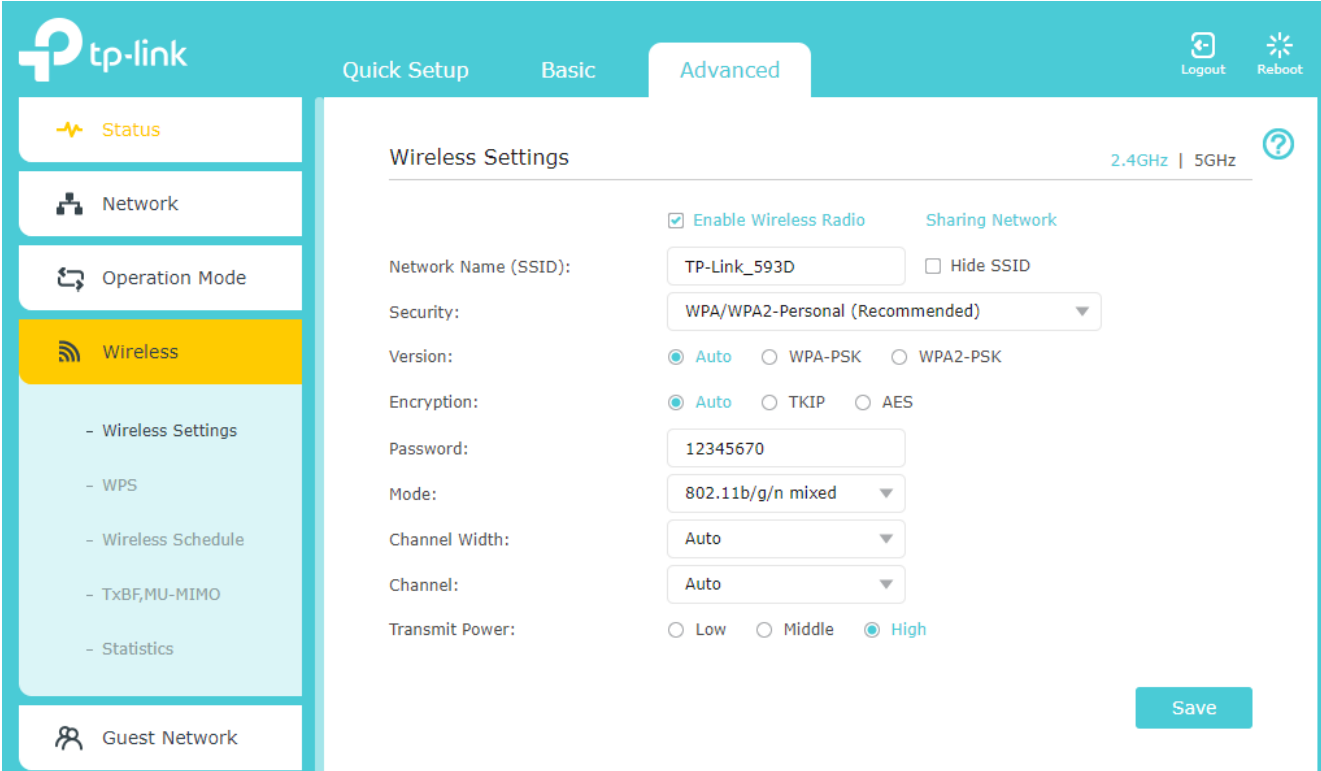

tp-link Quick Setup Basic **Advanced** Logout Reboot

Status Network Operation Mode **Wireless** Guest Network

Wireless Settings 2.4GHz | 5GHz

Enable Wireless Radio [Sharing Network](#)

Network Name (SSID): TP-Link_593D Hide SSID

Security: WPA/WPA2-Personal (Recommended)

Version: Auto WPA-PSK WPA2-PSK

Encryption: Auto TKIP AES

Password: 12345670

Mode: 802.11b/g/n mixed


Channel Width: Auto

Channel: Auto

Transmit Power: Low Middle High

Save

8. viršuje, dešinėje pusėje, pasirinkite 5GHz;

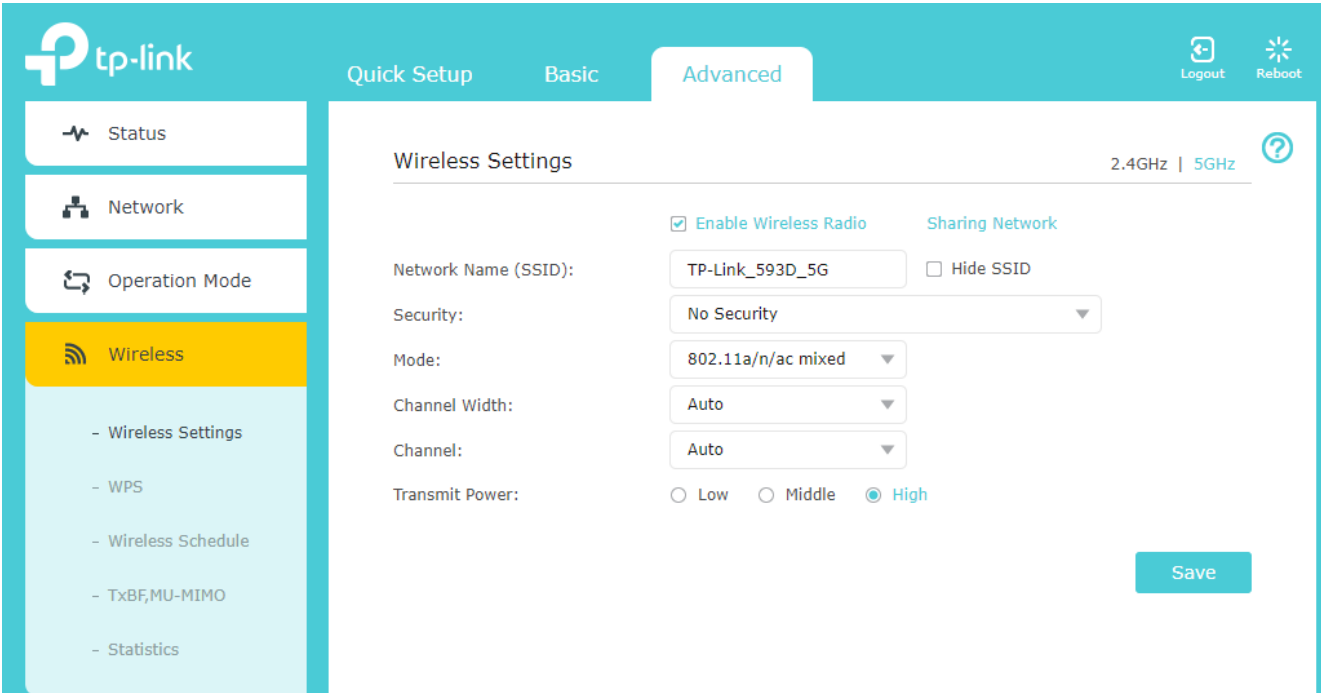

tp-link Quick Setup Basic **Advanced** Logout Reboot

Status Network Operation Mode **Wireless** Guest Network

Wireless Settings 2.4GHz | 5GHz

Enable Wireless Radio [Sharing Network](#)

Network Name (SSID): TP-Link_593D_5G Hide SSID

Security: No Security

Mode: 802.11a/n/ac mixed


Channel Width: Auto

Channel: Auto

Transmit Power: Low Middle High

Save

- laukelyje „Security“ nustatykite „WPA/WPA2-Personal (Recommended)“;
- laukelyje „Password“ įrašykite savo sugalvotą slaptažodį. Paspauskite „Save“;

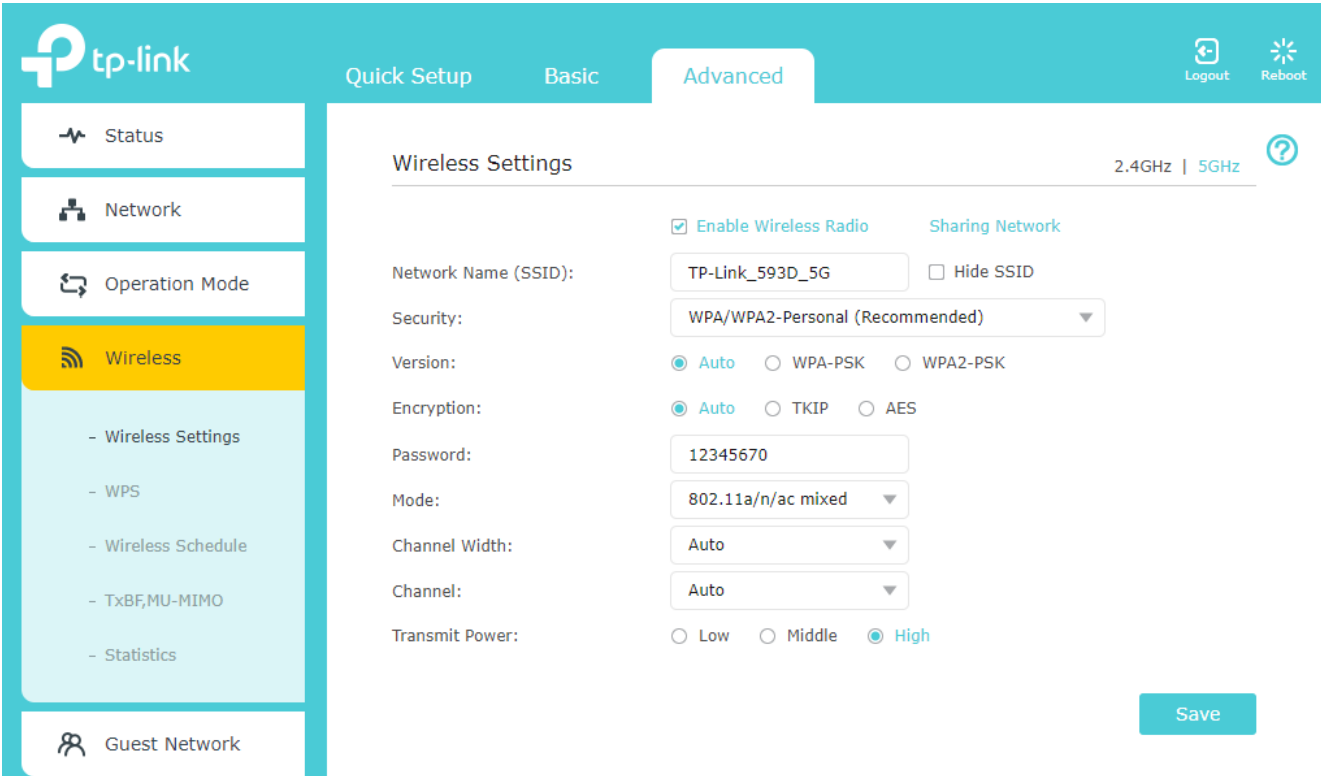

The screenshot shows the TP-Link web interface for configuring wireless settings. The 'Advanced' tab is active, and the 'Wireless' section is selected in the left sidebar. The 'Wireless Settings' page is displayed for the 2.4GHz band. The configuration includes:

- Enable Wireless Radio:**
- Sharing Network:**
- Network Name (SSID):** TP-Link_593D_5G
- Hide SSID:**
- Security:** WPA/WPA2-Personal (Recommended)
- Version:** Auto WPA-PSK WPA2-PSK
- Encryption:** Auto TKIP AES
- Password:** 12345670
- Mode:** 802.11a/n/ac mixed
- Channel Width:** Auto
- Channel:** Auto
- Transmit Power:** Low Middle High

A 'Save' button is located at the bottom right of the configuration area.

- perkraukite maršruto parinktuvą (atjunkite maitinimo blokelį).