


TP-Link Archer C7


1. Internetinio adreso lauke įveskite 192.168.0.1 (jei nebuvo pakeista kitokiu);



2. į abu laukelius „User Name“ ir „Password“ įveskite žodį **admin**. Pateksite į maršruto parinktuvo nustatymus;

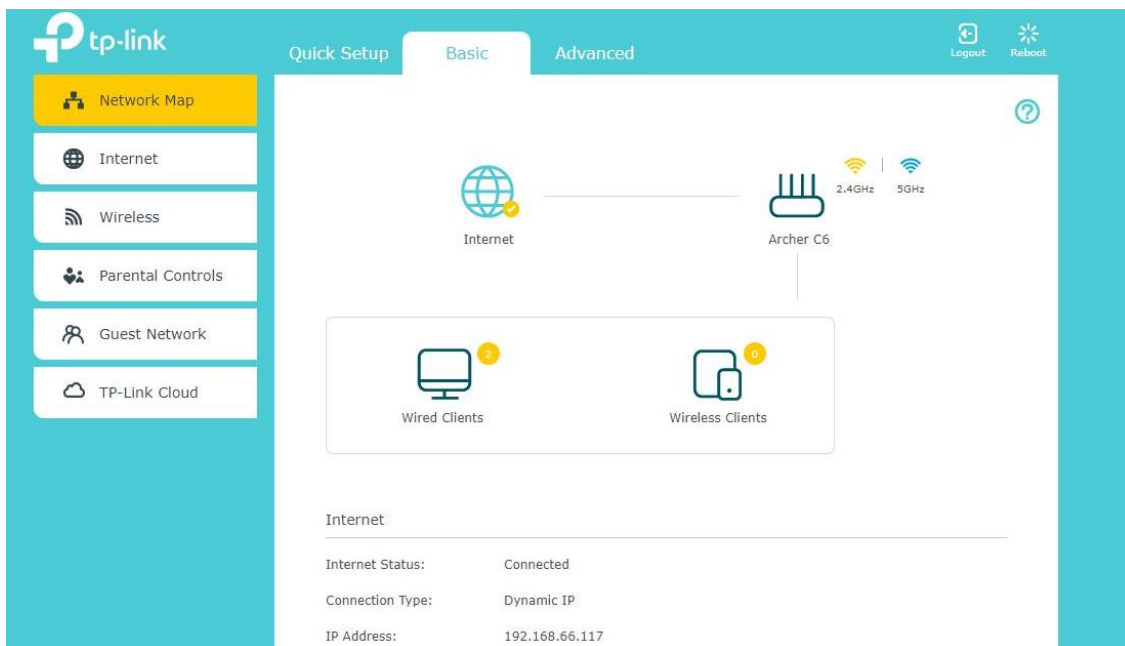

3. pasirinkite viršuje esančią skiltį „Advanced“;

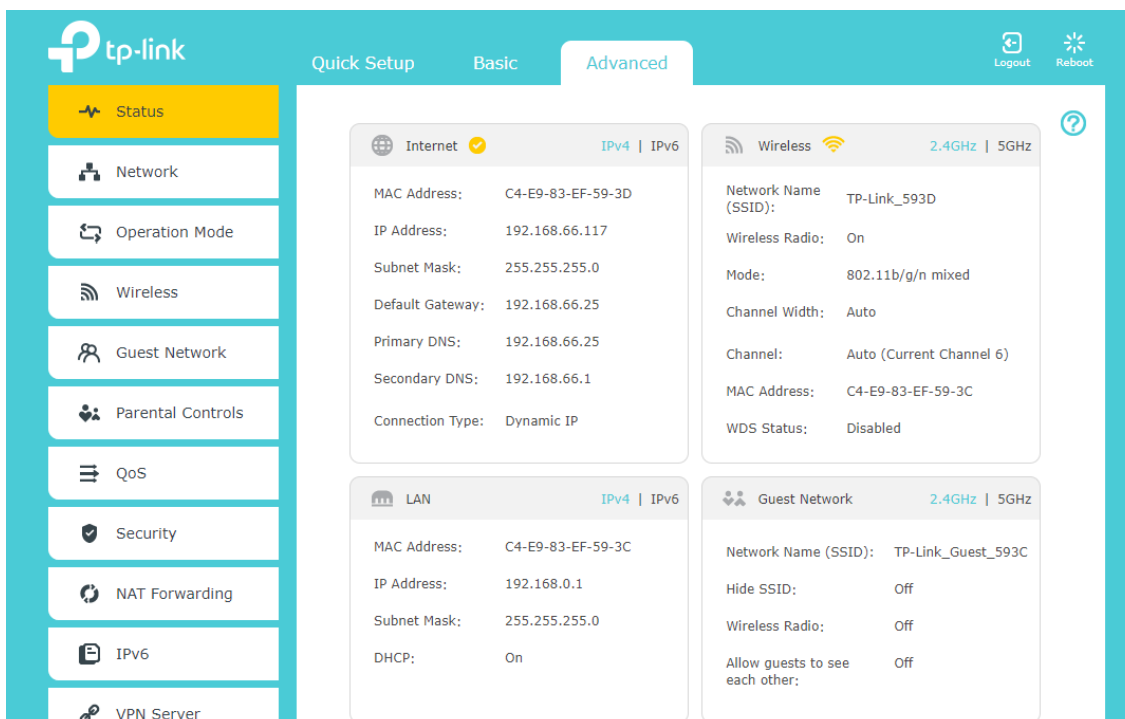

4. kairėje meniu pusėje pasirinkite „Wireless“;

The screenshot shows the TP-Link router's web interface. The top navigation bar includes 'Quick Setup', 'Basic', and 'Advanced' tabs, with 'Advanced' selected. On the left, a sidebar menu lists various settings, with 'Wireless' highlighted. The main content area displays several configuration panels:

- Internet:** Shows network details such as MAC Address (C4-E9-83-EF-59-3D), IP Address (192.168.66.117), Subnet Mask (255.255.255.0), Default Gateway (192.168.66.25), Primary DNS (192.168.66.25), Secondary DNS (192.168.66.1), and Connection Type (Dynamic IP).
- Wireless:** Shows wireless settings including Network Name (SSID) (TP-Link_593D), Wireless Radio (On), Mode (802.11b/g/n mixed), Channel Width (Auto), Channel (Auto (Current Channel 6)), MAC Address (C4-E9-83-EF-59-3C), and WDS Status (Disabled).
- LAN:** Shows LAN network details: MAC Address (C4-E9-83-EF-59-3C), IP Address (192.168.0.1), Subnet Mask (255.255.255.0), and DHCP (On).
- Guest Network:** Shows guest network settings: Network Name (SSID) (TP-Link_Guest_593C), Hide SSID (Off), Wireless Radio (Off), and Allow guests to see each other (Off).
- Wired Clients:** Shows 2 wired clients, with one listed as LEO-MS-7529.
- Wireless Clients:** Shows 0 wireless clients.

5. pasirinkite „Wireless settings“;

tp-link Quick Setup Basic **Advanced** Logout Reboot

Status
Network
Operation Mode
Wireless
- Wireless Settings
- WPS
- Wireless Schedule
- TxBF, MU-MIMO

Wireless Settings 2.4GHz | 5GHz

Enable Wireless Radio Sharing Network

Network Name (SSID): Hide SSID

Security:

Mode:

Channel Width:

Channel:

Transmit Power: Low Middle High

6. laukelyje „Security“ nustatykite „WPA/WPA2 – Personal (Recommended)“;

7. laukelyje „Password“ įrašykite savo sugalvotą slaptažodį. Paspauskite „Save“;

Wireless Settings

2.4GHz | 5GHz

Enable Wireless Radio Sharing Network

Network Name (SSID): Hide SSID

Security:

Version: Auto WPA-PSK WPA2-PSK

Encryption: Auto TKIP AES

Password:

Mode:

Channel Width:

Channel:

Transmit Power: Low Middle High

8. Viršuje, dešinėje pusėje, pasirinkite 5Ghz;

The screenshot shows the TP-Link web interface. The top navigation bar includes 'Quick Setup', 'Basic', and 'Advanced' tabs. The 'Advanced' tab is selected. On the left, there is a sidebar with a 'Wireless' menu item highlighted in yellow. Below it, a list of sub-items includes 'Wireless Settings', 'WPS', 'Wireless Schedule', 'TxBF,MU-MIMO', and 'Statistics'. The main content area is titled 'Wireless Settings' and shows various configuration options. The 'Security' dropdown menu is currently set to 'No Security'. The 'Save' button is located at the bottom right of the configuration area.

9. laukelyje „Security“ nustatykite „WPA/WPA2 – Personal (Recommended)“;

10. laukelyje „Password“ įrašykite savo sugalvotą slaptažodį. Paspauskite „Save“.

This image shows a detailed view of the 'Wireless Settings' page. The 'Security' dropdown menu is now set to 'WPA/WPA2-Personal (Recommended)'. The 'Password' field contains the text '12345670'. The 'Save' button is still visible at the bottom right.

11. perkraukite maršruto parinktuvą (atjunkite maitinimo blokelį).